

START

Press the  key to confirm and clear any previous shutdown conditions.

Clear To Start indicates the BMS is ready for ignition.

Press the  key to begin the automatic startup sequence.

Normal Operation indicates the startup sequence is complete.

STOP

Press the  key for shutdown or to cancel the startup sequence.

Local Manual S/D indicates burner shutdown.

BMS-2000 SERIES QUICK ACCESS System V 5.03

Press the  key to access the information and control pages.

Use the  and  keys to scroll through to the desired page.

Page One:

- Startup Sequence Step Indication
- First Out Annunciation with Chronological Indication
- Pilot Flame Temperature

Page Two:

- Bath and / or Process Temperature Set Points
- Output Level or State
- High Temperature Protection Setting
- Manual / Auto Indication
- Remote / Local Indication

Page Three:

- Pilot Valve Status
- Main Valve Status
- Igniter Status
- Purge Blower Status

Page Four:

- Spare Analog Indication
- Stack Temperature and Shutdown Set Point
- Supply Voltage Level

Page Five:

- Temperature Control Parameters
- Proportional Band Setting
- Reset Value
- Rate Value
- ON/OFF Control Dead Band

**For operational or technical assistance,
please contact us: (403) 342-4494**